 


Optical Fiber Cleaver

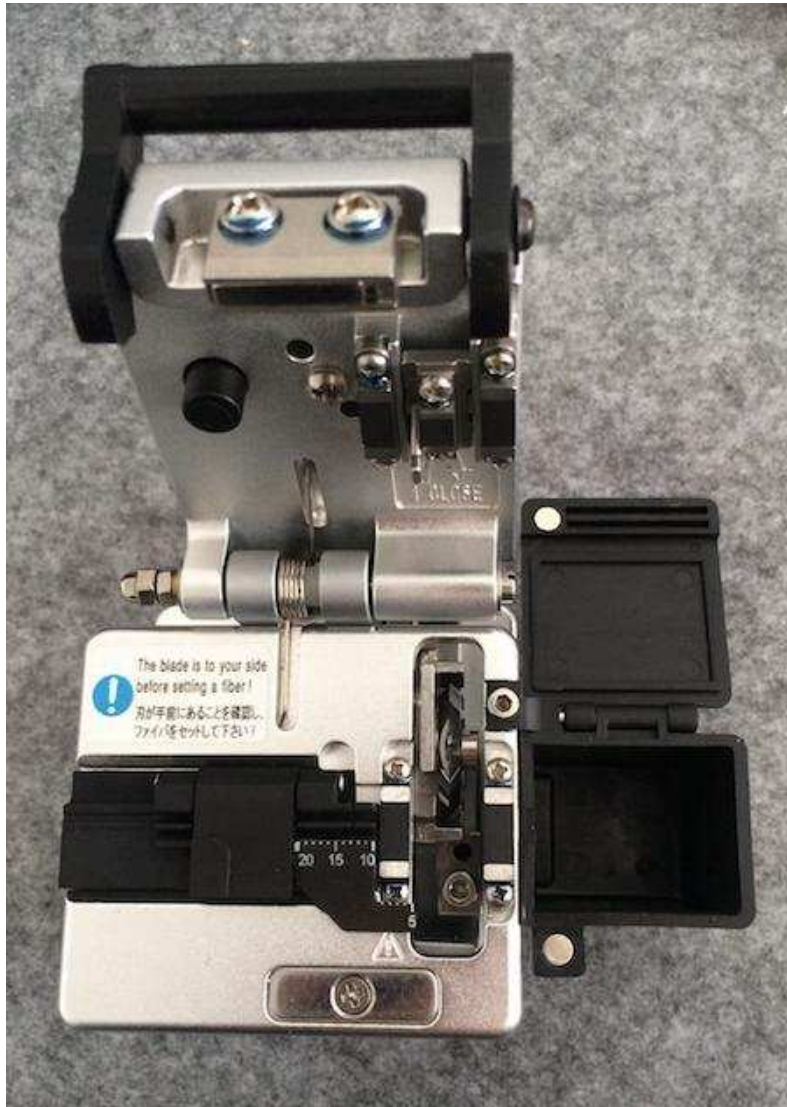


---with Off-Cut Collector

I.Specification

Optical Fiber Cleaver	
Suitable fiber	Single fiber
Coating diameter	0.25mm&0.9mm
Cladding Diameter	125um


Cleaving length	5~20mm
Cleaving angle	0.5°
Blade life	48000 times
Weight	Approx. 430g
Dimension	63(W) X 84(D) X 63(H) mm

 II. Structure:

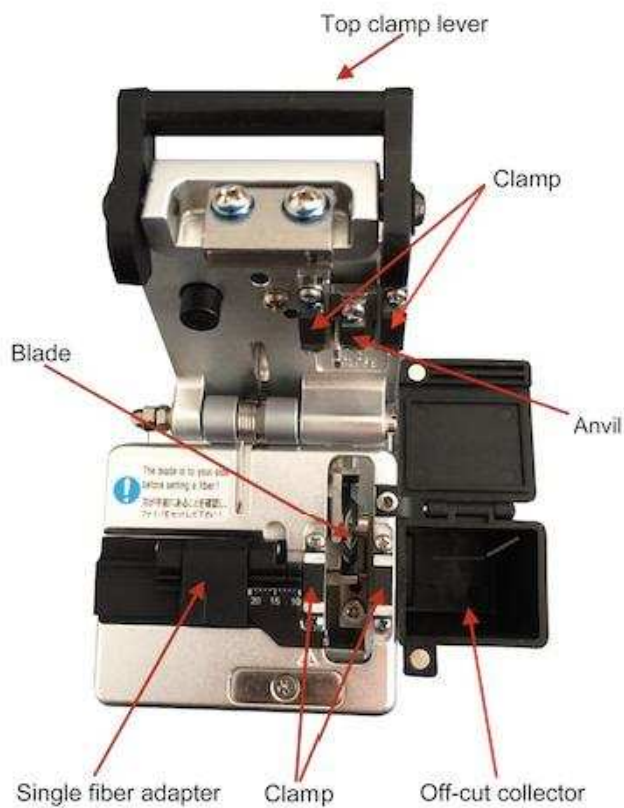


III. Operating Procedures

 
1. Open the top clamp lever and the lid of the single fiber adapter. The blade carriage should be in the forward position.

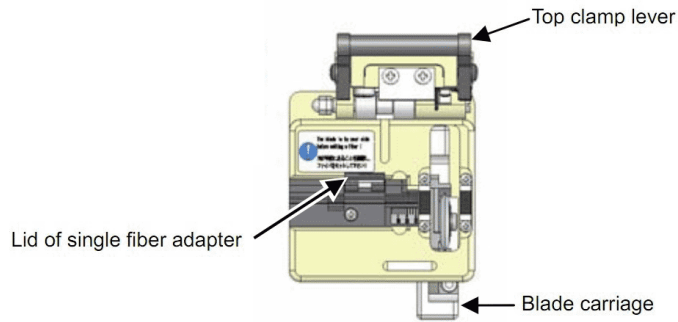

 
2. Lower the fiber straight into the correct V-groove with the end of the fiber coating (e.g. if the cleave length is 16mm) at the 16mm mark on the ruler.

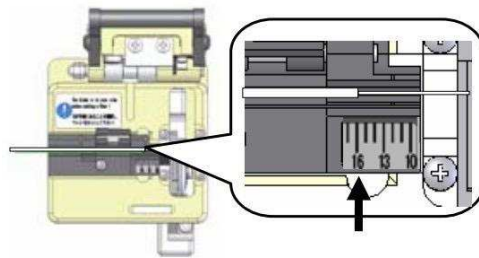

 3. Close the lid of the single fiber adapter.
 4. Lower the top clamp lever. Slide the blade carriage to the rear of the cleaver. The fiber will be cleaved.

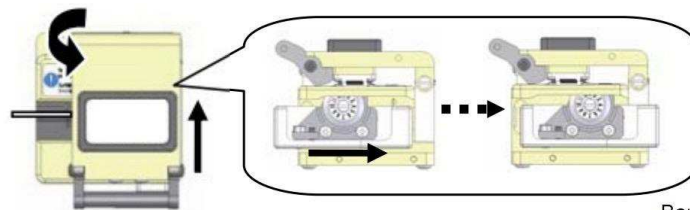

 5: Open the top clamp lever. Then open the lid of the single fiber adapter and lift the newly cleaved fiber. Lift the off-cut and dispose it properly.

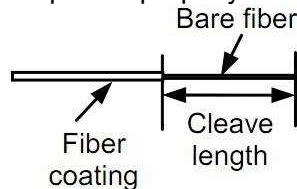

IV. Ordering Information

Standard Accessory	
Optical Fiber Cleaver with off-cut collector	1 pc
Carrying Case	1 pc
Operation Manual	1 pc
Optional Accessory	
09-0106 Reservblad	1 pc